


---

## 7. SPARE PARTS

PART NO	DESCRIPTION
020960	Door Glass (E83 only)
020961	Door Glass (E84 only)
020962	Glass Back Panel (E83 only)
020963	Glass Back Panel (E84 only)
018178K	Door Handle Kit
020964	Rack (E83 only)
020965	Rack (E84 only)
021109	Element - 240V 800W (E83 only)
022103	Element - 110V 800W (E83 only)
021110	Element - 240V 1100W (E84 only)
022102	Element - 110V 1100W (E84 only)
011980	Thermostat
021112	Knob
021113	Thermometer
013528	Neon Indicator
021342	Lamp Holder Assembly (Light Models Only)
014218	Bulb E14 25W 240V (Light Models Only)
014219	Bulb E14 15W 115V (Light Models Only)
21114	Foot
20966	End cap
21102	Element Guard (E83 only)
21103	Element Guard (E84 only)

## 8. PARTS DIAGRAMS

### 8.1 MAIN ASSEMBLY

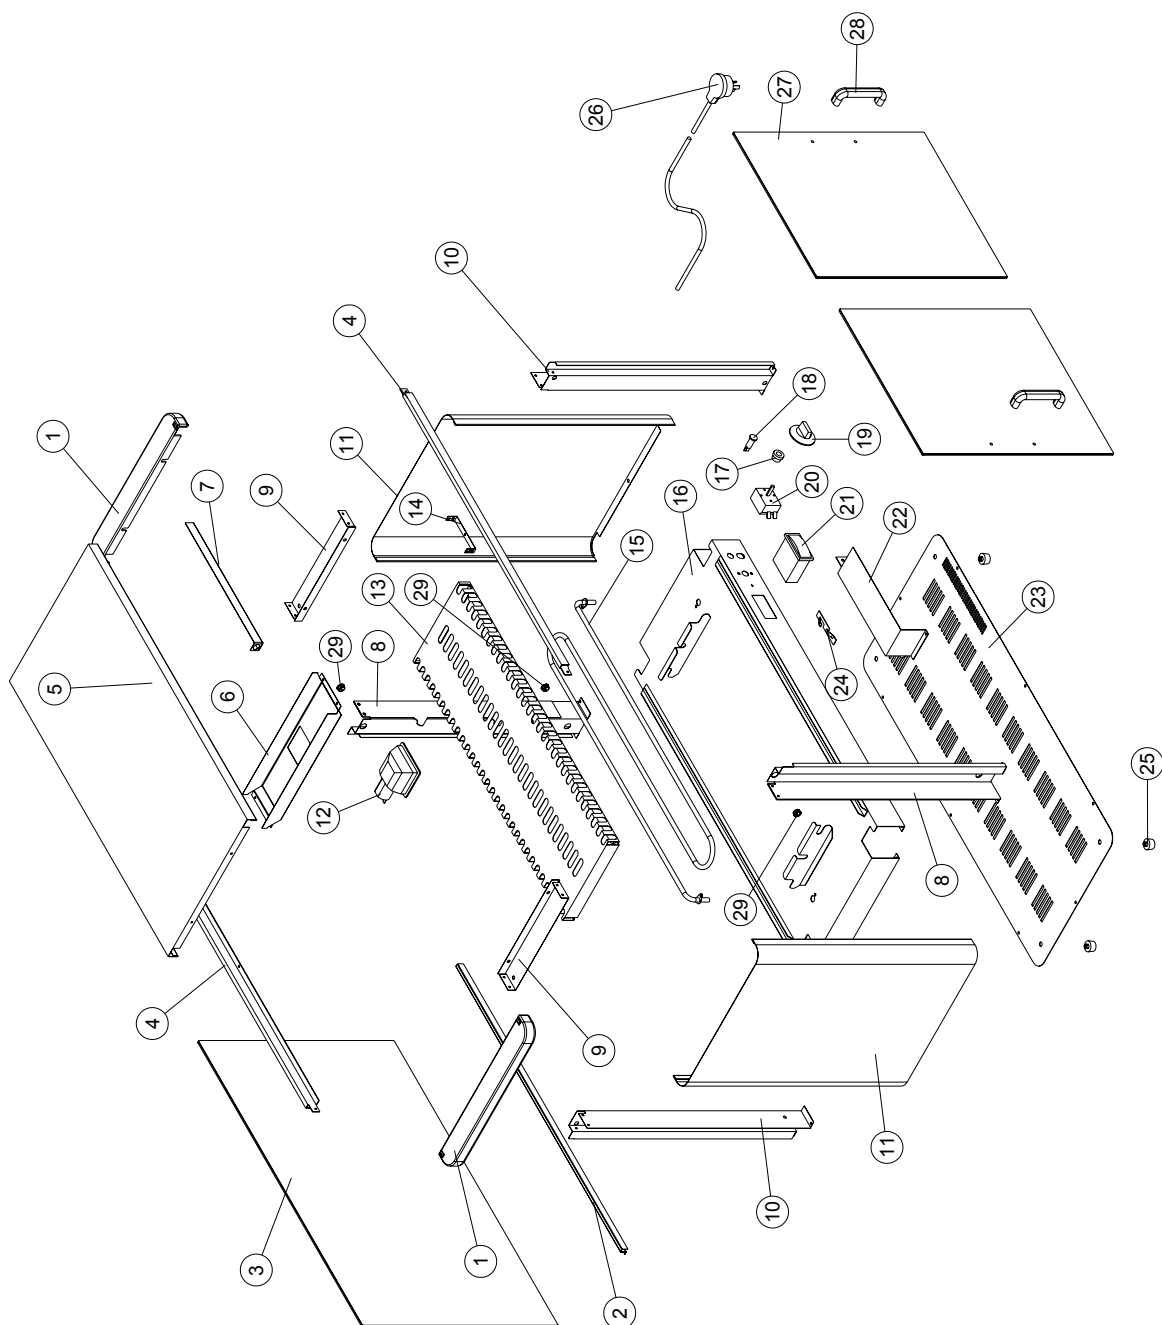

Pos	Part No.	Description
1	020966	END CAP - BLACK
2	021107	DOOR CHANNEL TRIM ( <b>E83 SOLID BACK ONLY</b> )
	021108	DOOR CHANNEL TRIM ( <b>E84 SOLID BACK ONLY</b> )
3	020962	FULL GLASS PANEL ( <b>E83 SOLID BACK ONLY</b> )
	020963	FULL GLASS PANEL ( <b>E84 SOLID BACK ONLY</b> )
4	021099	DOOR CHANNEL UPPER ( <b>E83 ONLY</b> )
	021100	DOOR CHANNEL UPPER ( <b>E84 ONLY</b> )
5	021087	WRAPPER TOP ( <b>E83 ONLY</b> )
	021089	WRAPPER TOP ( <b>E83 SOLID BACK ONLY</b> )
	021088	WRAPPER TOP ( <b>E84 ONLY</b> )
	021090	WRAPPER TOP ( <b>E84 SOLID BACK ONLY</b> )
6	021757	LAMP CHANNEL ( <b>LIGHT MODEL ONLY</b> )
7	021758	WIRING COVER ( <b>E83 LIGHT MODEL ONLY</b> )
	021759	WIRING COVER ( <b>E84 LIGHT MODEL ONLY</b> )
8	021098	CORNER POST LH ( <b>TO S/N 256474</b> )
	021083	CORNER POST LH ( <b>FROM S/N 256475</b> )
	025365	RACK SUPPORT ( <b>FROM S/N 256475 -not illustrated</b> )
9	021085	TOP RAIL
10	021097	CORNER POST RH( <b>TO S/N 256474</b> )
	021084	021084 CORNER POST RH( <b>FROM S/N 256475</b> )
	025365	RACK SUPPORT ( <b>FROM S/N 256475 -not illustrated</b> )
11	021091	WRAPPER SIDE
12	021342	LAMPHOLDER ASSEMBLY 240V ( <b>LIGHT MODEL ONLY</b> )
	014218	BULB E14 25W 240V ( <b>LIGHT MODEL ONLY</b> )
	014219	BULB E14 15W 125V ( <b>LIGHT MODEL ONLY</b> )
13	021102	ELEMENT GUARD ( <b>E83 ONLY</b> )
	021103	ELEMENT GUARD ( <b>E84 ONLY</b> )
14	021101	PHIAL GUARD
15	021109	ELEMENT - 240V -800W ( <b>E83 ONLY</b> )
	021110	ELEMENT - 240V -1100W ( <b>E84 ONLY</b> )
	022103	ELEMENT - 110V -800W ( <b>E83 ONLY</b> )
	022102	ELEMENT - 110V -1100W ( <b>E84 ONLY</b> )
16	021092	BASE ( <b>E83 ONLY</b> )
	021093	BASE ( <b>E84 ONLY</b> )
17	002597	CORD GRIP GROMMET
	015098	CORD GRIP GROMMET ( <b>CAN / UK ONLY</b> )
18	013528	PILOT LAMP
19	021112	KNOB
20	011980	THERMOSTAT
21	021113	THERMOMETER ( <b>20 - 120°C</b> ) ( <b>DUAL MARKINGS</b> )
22	021104	HEAT SHIELD
23	021105	BASE COVER ( <b>E83 ONLY</b> )
	021106	BASE COVER ( <b>E84 ONLY</b> )
24	010547	DOOR RETAINER
25	021114	FOOT
26	002414	CORDSET ( <b>AU / NZ</b> )
	017453	CORDSET 13A FUSED ( <b>UK ONLY</b> )
	025855	CORDSET NEMA 5-15P ( <b>CANADA ONLY</b> )
	012877	POWER FLEX - 7.5 Amp
	012289	CORDSET - 110V
27	020960	GLASS DOOR ( <b>E83 ONLY</b> )
	020961	GLASS DOOR ( <b>E84 ONLY</b> )
28	018178K	HANDLE KIT
29	013062	SNAP BUSH – 12.7mm ( <b>LIGHT MODEL ONLY</b> )
	020964	RACK ( <b>E83 ONLY</b> ) ( <b>NOT SHOWN</b> )
	020965	RACK ( <b>E84 ONLY</b> ) ( <b>NOT SHOWN</b> )